

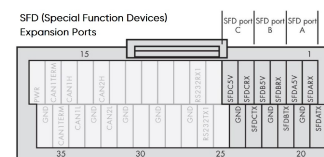
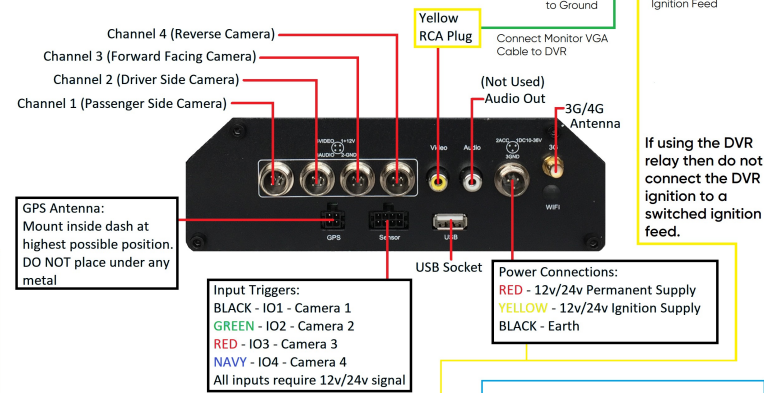
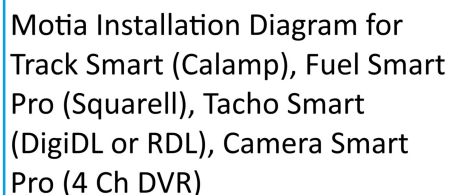
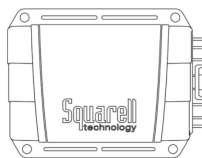
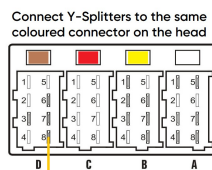
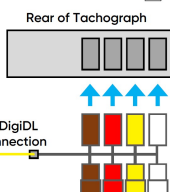
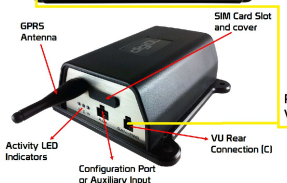
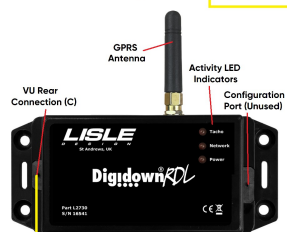
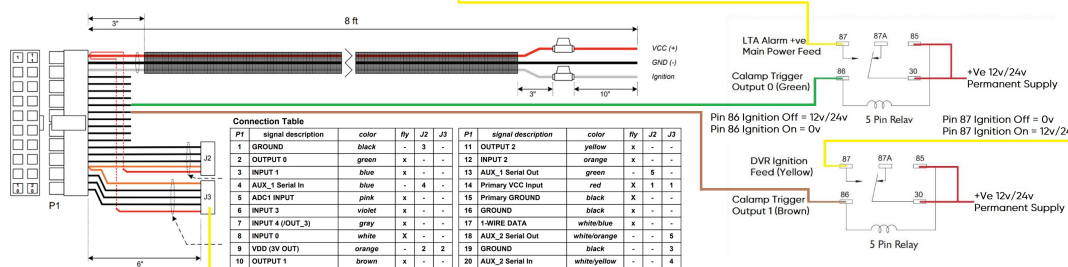


Pin 30 = +ve
Pin 85 = +ve (Pins 85 & 86 Can Be Reversed)
Pin 86 = Calamp Trigger
Pin 87 = Output (DVR or LTA)
Pin 87a = No Connection

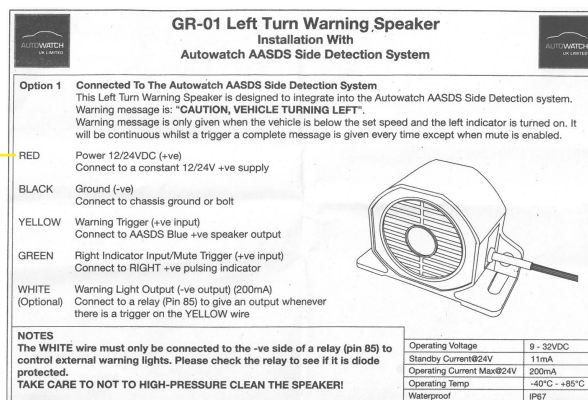

Note:
The LED will blink green +2 orange blips indicating that the SOLID is operational but CAN1 is not operational.

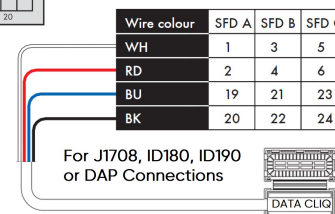

For assistance with installations please contact Motia support on 02894 485 423 or email fleetsupport@motia.com

Motia.
telematics



Blue Cable
RCA Switch
(Unused)

Black Cable
to Ground

DVR Monitor +ve (Red)
Connect to DVR
Ignition Feed

If using the DVR relay then do not connect the DVR ignition to a switched ignition feed.